



## 12-Cup Coffee Maker



## Instruction Manual

ITEM: 761729

Montgomery Ward Customer Service  
3650 Milwaukee Street, Madison, WI 53714  
8:00 am to Midnight, Monday through Friday

**Wards.com 1-888-557-3848**

**Wards.com 1-888-557-3848**



Thank you for purchasing your Chef Tested 12-Cup Coffee Maker by Montgomery Ward. Put through the paces by the experts, we guarantee that it will perform to the highest standard, time after time, with all the convenience, easy cleanup and durability you rely on from Wards.

## Table of Contents

Important Safeguards .....	3
Electrical Safety .....	4
Specifications .....	4
Parts & Features.....	5-6
How to Use .....	7-9
Cleaning & Care.....	10
Helpful Hints .....	11
Return Information .....	12
Warranty.....	13

## Important Safeguards

### READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. Do not use this appliance for other than its intended use.
- REMOVE all packaging materials and labels before first use. Please dispose of the packaging materials via the appropriate recycling system, in an environmentally friendly manner.
- WASH all removable parts before first use. See Cleaning & Care.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. Do not drape the cord over the counter or tabletop, where it can be pulled on or tripped over. Never wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We DO NOT recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. DO NOT place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. DO NOT use near water.
- DO NOT use an accessory or attachment not recommended by the manufacturer, as this may cause injury, or damage the appliance.
- Always use OVEN MITTS when handling hot food or appliances. DO NOT attempt to move an appliance when it is hot or has hot contents.
- DO NOT use outdoors.
- Do not use the appliance if the carafe shows any sign of cracks.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances/tools contain valuable materials that can be recycled. Please dispose of your old appliances/tools using appropriate collection systems.




Intertek


**This appliance is equipped with a polarized plug in which one prong is wider than the other.** This is a safety feature to reduce the risk of electrical shock. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Montgomery Ward can not accept any liability for damage or injury resulting from failure to observe these safety procedures.

## Specifications

<b>POWER RATING</b>	<b>60Hz, 120V, 1000W</b>
<b>CAPACITY</b>	<b>64 Oz.</b>
<b>CORD LENGTH</b>	<b>24"</b>
<b>DIMENSIONS</b>	<b>7½" L x 9" W x 14" H</b>
<b>MODEL</b>	<b>SLO-094</b>

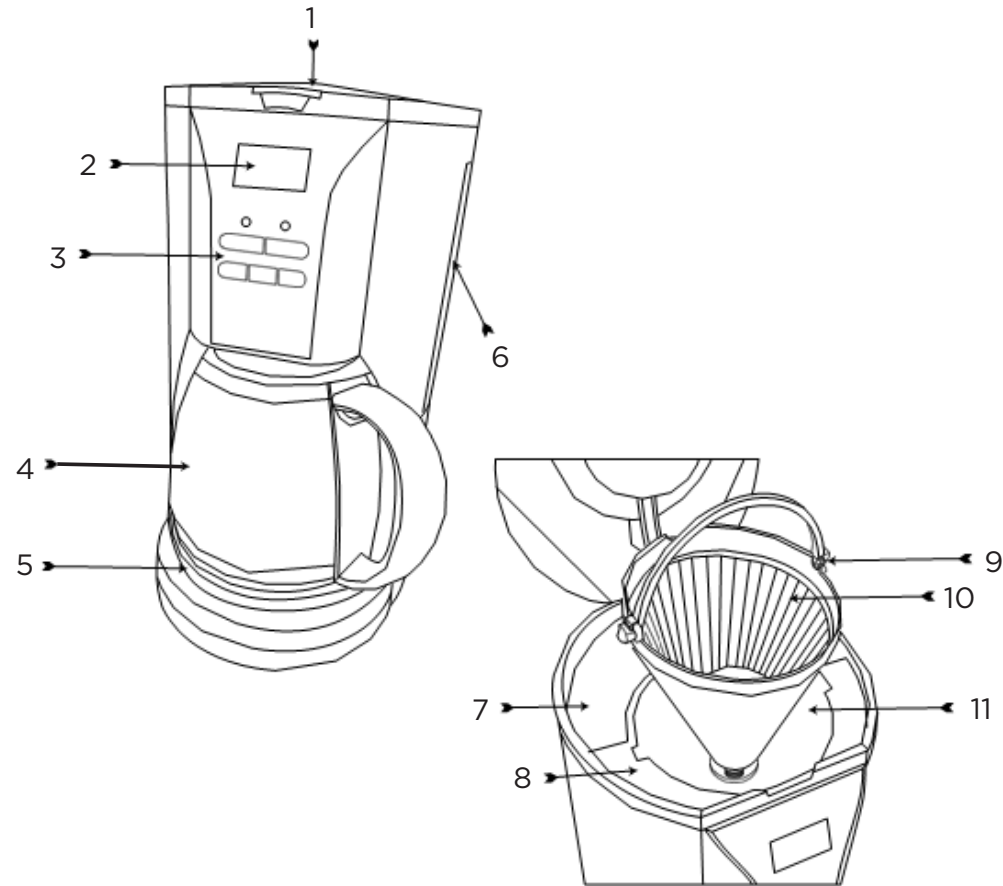

1. Water Tank Lid
2. Digital Display Window
3. Control Panel (more detail on page 6)
4. Carafe
5. Hot Plate
6. Water Gauge
7. Water Tank
8. Filter Basket Slot (2)
9. Filter Basket Pin (2)
10. Filter Basket
11. Filter Basket Holder

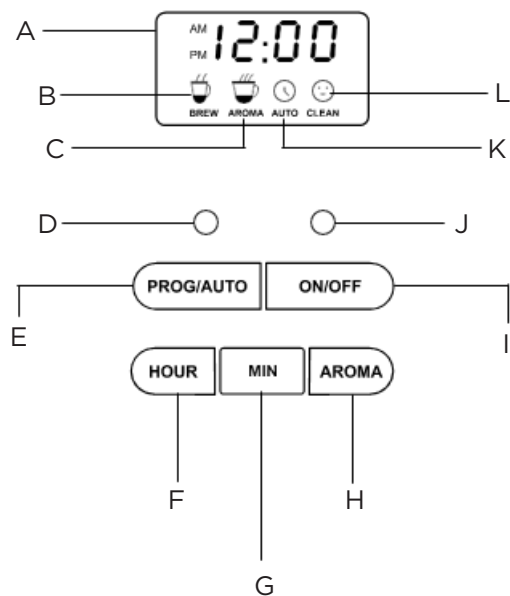

- A. Digital Display Window
- B. Brew Indicator Icon
- C. Aroma Indicator Icon
- D. Prog/Auto Indicator Light
- E. Prog/Auto Button
- F. Hour Button
- G. Minute Button
- H. Aroma Button
- I. On/Off Button
- J. On/Off Indicator Light
- K. Auto Set Indicator Icon
- L. Clean Indicator Icon

**WARNING:** The lid may become hot during use and hot steam may escape from top of the unit. **DO NOT** open the water tank lid while the coffee maker is on.

**Note:** The coffee maker can be used without setting the clock, but the clock has to be set for AUTO SET (delay brew timer) to work.

### SETTING THE CLOCK

1. Plug the cord into an outlet. The display will light up blue and 12:00 will flash.
2. Press HOUR and MINUTE to set the time. Please note the AM/PM indicators in the display window, to the left of the time.
3. After a short period of time, the blue display will automatically go out. The clock is now set.

**Note:** To remove any remaining residue from the manufacturing process, we recommend running a brew cycle for the first time using WATER ONLY. When the brew cycle is finished, discard the water.

### BREWING COFFEE

1. Open the water tank lid. Ensure the filter basket is in place (pins aligned with slots) and place a #4 paper cone filter in the basket. Add the desired amount of coffee to the filter.
2. Using the glass carafe, fill the water tank with the desired amount of COLD water (which correlates to the amount of coffee you are using). **DO NOT FILL LESS THAN 4 CUPS OR MORE THAN 12 CUPS ON THE WATER GAUGE.**
3. Close the water tank lid and place the empty carafe on the hot plate.
4. Press ON/OFF. The on/off indicator light will turn on and the brew indicator icon will show on the display window. (To cancel, press ON/OFF again.)
5. When the brewing process is complete the coffee maker will automatically begin the keep warm time. The brew icon will go out but the on/off indicator light will remain on.
6. The hot plate will remain on keep warm for 2 hours, then the coffee maker will shut-off automatically.

### ***AUTO SET (DELAY BREW TIMER)***

The clock has to be set for auto set (delay brew timer) to work.

1. Follow steps 1-3 under Making Coffee on page 7.
2. Press and hold PROG/AUTO until 12:00 flashes and the display lights blue. The prog/auto indicator light will flash and the auto set indicator icon will show in the display window.

**Note:** PROG/AUTO will exit if no button is pressed within 10 seconds.

3. Press HOUR and MINUTE to select the time you want your coffee maker to automatically start brewing. Please note the AM/PM indicators in the display window, to the left of the time.
4. Press PROG/AUTO **2 times** to set the timer and to exit PROG/AUTO. The delay time will be displayed briefly, then it will revert to clock setting. The prog/auto indicator light will be on and the auto set indicator icon will show in the display window. The timer is now set.
5. To cancel the timer, press PROG/AUTO again (the prog/auto indicator light will go out and the auto set indicator icon will no longer show in the display window).
6. When the programmed time is reached, the coffee maker will start to brew the coffee. The auto set indicator icon will no longer show in the display window, the prog/auto indicator light will go out and the on/off indicator light will come on.

### ***KEEP WARM***

The coffee maker will continue to keep warm for 2 hours, then it will shut off automatically.

### ***AROMA***

This feature slows the brew cycle slightly to provide a richer flavor, if desired.

1. The aroma feature can only be set when the coffee maker is on or auto set (delay brew timer) is set.
2. Press AROMA to turn the feature on. The aroma indicator icon will show in the display window.
3. Press AROMA again to cancel the feature.

### ***CLEAN INDICATOR***

1. The clean indicator icon will show in the display window when the coffee maker requires descaling. (Coffee can still be brewed when this indicator is on.)
2. When ready to descale, follow the instructions on page 10.
3. The clean icon will be displayed until the coffee maker is reset by unplugging the coffee maker from the electrical outlet.

### ***DIGITAL DISPLAY WINDOW***

The blue display light can be set to be continuously on by pressing and holding HOUR and MINUTE simultaneously for approximately 5 seconds. Press and hold HOUR and MINUTE simultaneously again for approximately 5 seconds to turn the light off.

### **DAILY CLEANING**

1. Turn off and unplug the appliance.
2. Always allow the appliance to cool completely before cleaning.
3. Using the handle, remove the basket and discard the used coffee grounds and paper filter.
4. Wash the carafe and the basket in hot, soapy water. Dry and replace. **DO NOT** use abrasive brushes or pads, or harsh cleaning solutions. The carafe and basket are also dishwasher safe.
5. Wipe the exterior of the coffee maker with a damp cloth.
6. **Do not immerse any electrical appliance, its cord, or its plug, into water.**

### **DESCALING**

*If the appliance is used in an area with hard water, we recommend descaling the coffee maker occasionally.* The clean indicator icon will show in the display window when the coffee maker needs descaling. Use a commercial descaling agent for coffee makers (follow the directions on the bottle), or use water and vinegar as follows:

1. Fill the water tank with water to the 12-cup mark. Add 1–2 Tbsp. white vinegar.
2. **DO NOT** add coffee to the basket. Press ON/OFF to run a brew cycle.
3. When finished, discard the used water and repeat the procedure with fresh water only.

### Tips

- This coffee maker is fitted with an anti-drip function, allowing you to remove the carafe at any time, even when coffee is still dripping from the filter. Take the carafe from the hotplate and pour the desired amount of coffee. Replace the carafe on the hot plate and allow the remainder of the coffee to brew.
- Let the carafe cool before adding cold water to a warm carafe when brewing multiple pots of coffee.
- If using a finely ground coffee, you may see some residue at the bottom of the carafe. Use a medium grind to avoid this.
- Use freshly ground coffee for the best flavor.
- The snapping lid is a safety feature.

If any item, for any reason, does not meet your expectations, just return it to us. We'll gladly either:

- Refund your merchandise amount
- Credit your account
- Send a replacement

You can return any unused item in its original packaging within 60 days of its receipt for a full refund of the purchase price (excluding shipping and handling charges).

**Please send returns to:**

**Montgomery Ward, Inc.  
Attn: Customer Returns  
2000 Harrison Suite 100  
Clinton, IA 52732-6676**

**When returning an item:**

- Use the original packaging and pack it securely.
- Please adequately insure your item in case you need to make a claim with the carrier you choose for returning your item.
- Include your order number and reason for return.
- We recommend keeping the receipt for 4 weeks.



### 1 Year Limited Warranty

Montgomery Ward, Inc. warrants this Chef Tested product to be free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Montgomery Ward will repair or replace, at its option, defective parts of this Chef Tested product at no charge, provided the product is returned, freight prepaid with proof of purchase to Montgomery Ward. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Montgomery Ward Customer Service  
8:00 am to Midnight CST, Monday through Friday

**Wards.com 1-888-557-3848**

