



SINGLE SERVE POD COFFEE MAKER

User Guide

Item: 766869



Ginnys.com • 800-544-1590

 Facebook.com/GinnysBrand

 Pinterest.com/GinnysBrand

Thank you for purchasing a Ginny’s Brand Single Serve Pod Coffee Maker. Save on counter space and save on time, but your morning will no longer be “routine”. Pods come in just about every flavor imaginable, so whether you are looking for a morning jolt as you run out the door, or reading the paper over a calming cup of tea, you are good to go. Enjoy!

TABLE OF CONTENTS

| | |
|--------------------------------------|-----|
| Important Safeguards | 3 |
| Electrical Safety and Specifications | 4 |
| Get to Know Your Appliance | 5 |
| How to Operate | 6–7 |
| Helpful Hints | 8 |
| Cleaning & Care | 9 |
| Troubleshooting | 10 |
| Notes | 11 |
| Warranty | 12 |

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. DO NOT use this appliance for other than its intended use.
- REMOVE all packaging materials and labels before first use. Please dispose of the packaging materials via the appropriate recycling system, in an environmentally friendly manner.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. DO NOT drape the cord over the counter or tabletop, where it can be pulled on or tripped over. NEVER wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We DO NOT recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- **CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.**
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. DO NOT place any paper or plastic items (not intended for use with this coffee maker) in the appliance. DO NOT place the appliance or its cord on or near a heated surface or in a heated oven.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. DO NOT use near water.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury, or damage the appliance.
- **Scalding may occur if the coffee maker is moved or opened, or if pod is disturbed during brewing cycles.**
- Always use OVEN MITTS when handling hot food or appliances. DO NOT attempt to move an appliance when it is hot or has hot contents.
- DO NOT use outdoors.
- TURN OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Please dispose of your old appliances using appropriate collection systems in accordance with federal and local regulations.


ELECTRICAL SAFETY

This appliance is equipped with a 3-prong grounding plug. This is a safety feature to reduce the risk of electrical shock. Using an extension cord is not recommended with this appliance. It is recommended that an electrical outlet serving ONLY this appliance be used. This outlet must be properly installed and grounded. If you have any questions about the grounding or electrical instructions, contact a qualified electrician. **DO NOT** attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

| | |
|--------------|---|
| POWER RATING | 120V, 60Hz, 800W |
| CAPACITY | 10 oz. |
| CORD LENGTH | 40" |
| DIMENSIONS | 4 ³ / ₄ " W x 9 ¹ / ₂ " H x 8 ¹ / ₄ " D |
| MODEL | SLO-088 |

GET TO KNOW YOUR APPLIANCE

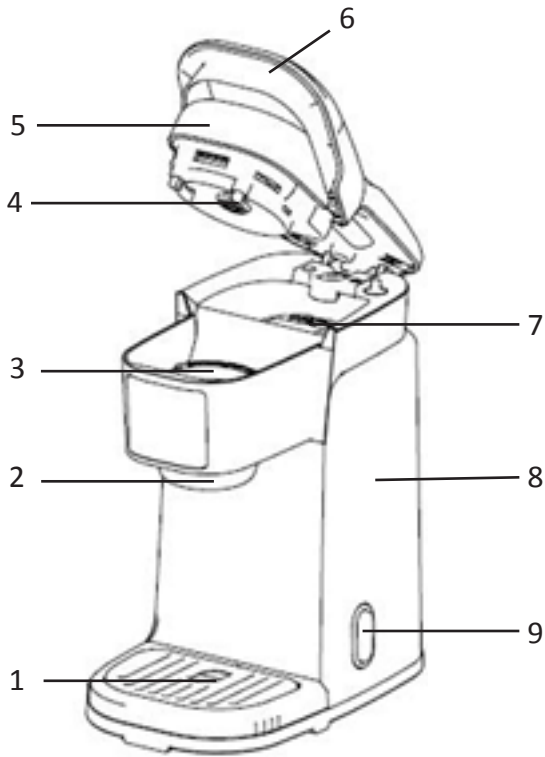

1. Removable Drip Tray Assembly
2. Dispenser
3. Removable Pod/Capsule Holder (with needle inside)
4. Gasket (with needle inside)
5. Top
6. Locking Handle
7. Removable Filter for Water Reservoir
8. Housing
9. On/Off Button with Power Light
10. Reusable Coffee Filter (not shown)
11. Cord Storage (not shown)

HOW TO OPERATE

- Before first use, run water through the coffee maker without a pod/capsule. Next, wash all removable parts (see Cleaning & Care on page 9) and replace before brewing first cup.
- Use only water in this appliance! Do not put any other liquids or foods in the reservoir.
- You may find a little water remaining in the machine; in order to ensure that this machine works perfectly, it may have been tested with water before leaving the factory.

WARNINGS


- There are 2 sharp needles that puncture the pod, one inside the gasket on the top, and one on the bottom of the pod/capsule holder. To avoid risk of injury, DO NOT put your fingers in these areas.
- To avoid risk of injury from hot water or hot steam, DO NOT lift the handle or open the top of the coffee maker during the brewing process.
- DO NOT remove the cup/mug until brewing is complete and the power light stops flashing.

1. Plug the cord into an outlet.
2. Using the handle, lift up the top.
3. Pour water through the filter to fill the reservoir (maximum 10 oz.).



HOW TO OPERATE

- Carefully insert a pod or the reusable coffee filter into the pod/capsule holder. (DO NOT peel the foil off cover of the pod!)

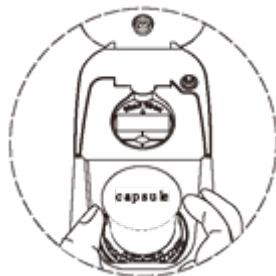

- Place a cup/mug under the dispenser on the drip tray.



- Close the top by pressing down on the handle until it clicks into place (the pod/capsule will be punctured on top and bottom).



- Press the ON/OFF button to start brewing. The power light around the button will flash during brewing process.
- When the power light stops flashing, brewing is complete. It is now safe to remove the cup.
- Always allow residual drips/steam to escape completely before lifting the top and carefully removing the used pod.
- Unplug the coffee maker when finished.

HELPFUL HINTS

- For the best tasting coffee, tea or hot cocoa, we recommend using bottled or filtered water. We do not recommend using distilled or reverse osmosis water.
- To brew into a tall cup/mug, remove the drip tray screen and place the tall cup/mug right on the drip tray base.
- Depending on the mineral content of the water you use in this coffee maker, calcium deposits or scale may build up. Scale is non-toxic, but left unattended, it can hinder brewing performance. De-scaling helps maintain the heating element and other internal parts of the coffee maker. To keep your coffee maker looking and performing its best, be sure to clean and de-scale on a regular basis (see Cleaning & Care on page 9).
- When storing this coffee maker, clean thoroughly and keep upright in a dry, frost-free environment.

CLEANING & CARE

1. Turn off and unplug the appliance.
2. Always allow the appliance to cool completely before cleaning.
3. Clean the housing and drip tray with a cloth dampened with warm, soapy water. Do not use abrasive brushes or pads or harsh cleaning solutions.
4. The pod/capsule holder can be hand washed or placed onto the top rack of a dishwasher. To remove from the coffee maker, carefully grasp the top of the pod holder and twist counterclockwise. **BE CAREFUL TO AVOID THE SHARP NEEDLE IN THE BOTTOM OF THE POD HOLDER.** If the needle becomes clogged with coffee grounds, it can be cleaned with a toothpick.
5. The filter can be removed from the coffee maker by pulling it straight up. Wash by hand or place on the top rack of a dishwasher.
6. Do not immerse any electrical appliance, its cord, or its plug into water.
7. Ensure all parts are dried thoroughly before reassembling and using this appliance.
8. De-scale the coffee maker every 3–6 months, or as needed, to ensure optimal performance:
 - a. Fill reservoir with 8 ounces of undiluted white vinegar and place a ceramic cup/mug on the drip tray.
 - b. Close the top and start a brew cycle without a pod/capsule.
 - c. When the vinegar begins to dispense, press the on/off button to stop the brewing cycle. Allow the coffee maker to sit for at least 30 minutes.
 - d. Press the on/off button again to restart and finish the brewing cycle. When finished, discard the contents of the mug.
 - e. Repeat steps a–d *twice* using water only. The coffee maker is now ready for normal use again.

TROUBLESHOOTING

| PROBLEM | CAUSE | SOLUTION |
|--|--|---|
| Coffee maker does not have power | Check plug. | If plug is secure, try another outlet. |
| Will not brew | The top is not closed or handle is not clicked into place. | Close the top and handle securely. |
| Brewing only a partial cup | Needle in pod/ capsule holder may be clogged. Scale is built up. | Clear needle with a toothpick and rinse with water. De-scale the coffee maker. |
| Coffee drops around the pod holder when brewing. | Gasket needle is dirty. | Clear needle with a toothpick. |

NOTES

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday