

# SPIN MOP User Guide

Item: 773059



Ginnys.com • 800-544-1590

Facebook.com/GinnysBrand

Pinterest.com/GinnysBrand

Thank you for purchasing a Ginny's Brand Spin Mop. Cleaning will probably never be fun, but this mop will get you close! The eco-friendly, machine washable mop head goes from hardwood to ceramic to vinyl flooring without a hitch. No more bending down or scalding your hands to wring out a dirty mop. Just twist, whirl and go!

### **TABLE OF CONTENTS**

Important Safeguards	3
Specifications	3
Get to Know Your Mop	4
How to Operate	5–7
Cleaning & Care	7
Warranty	8


#### **IMPORTANT SAFEGUARDS**

#### **READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!**

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS ITEM FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials and labels before first use. Dispose of the packaging materials via the appropriate recycling system.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the mop.
- Keep hands, hair and clothing away from all moving parts.
- Use extra care when walking on wet floors and alert others to wet conditions.

SPECIFICATIONS		
CAPACITY	1.8 gallons	
BUCKET DIMENSIONS	17½" W x 8¾" H x 11" D	
ASSEMBLED MOP HANDLE LENGTH	47"	
MODEL	18001	

## **GET TO KNOW YOUR MOP**

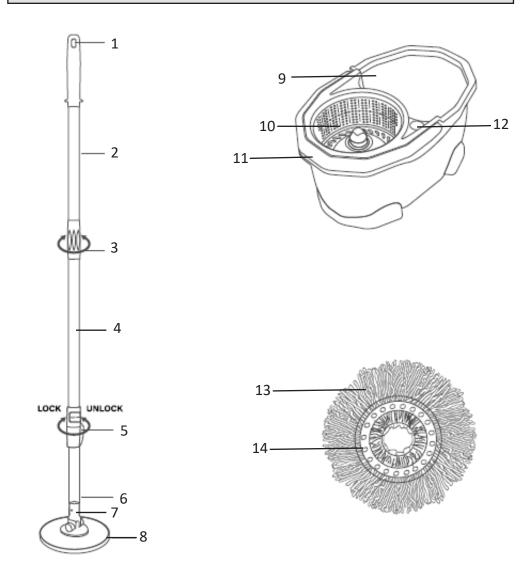


- 1. Mop Handle
- 2. Top Rod
- 3. Connection Sleeve
- 4. Bottom Rod
- 5. Spin Lock
- 6. Threaded End (to attach Mop Disc)
- 7. Collar

- 8. Mop Disc
- 9. Bucket
- 10. Wringer Basket11. Bucket Handle
- 12. Centering Guide
- 13. Micro Fiber Mop Head (2)
- 14. Mop Ring

## **HOW TO OPERATE**

#### **ASSEMBLY**


- 1. Screw the top rod to the bottom rod at the connection sleeve.
- 2. Loosen the collar on the mop disc.
- 3. Screw the bottom rod into the mop disc. Tighten the collar.
- 4. Place the mop head on a dry floor with the mop ring facing up.
- 5. Align the disc and the mop head, then step on the disc so the mop clicks securely into place.

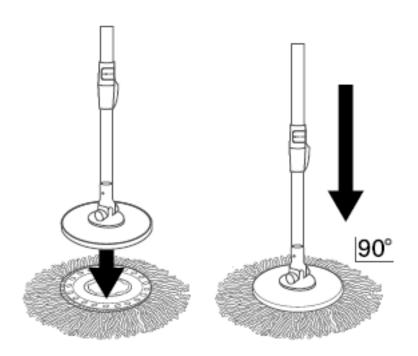

## **HOW TO OPERATE**

#### WRINGING


- 1. Dip the mop in the wash water in the bucket, over the centering guide.
- 2. Lift the wet mop into the wringer basket.
- 3. Unlock the spin lock.
- 4. Hold the rod and press downward to rotate the mop head and wring out water.
- 5. Adjust the pressure and rotation speed to control the wetness of the mop.
- 6. Lock the spin lock and take the mop out of basket. The mop is ready to use.

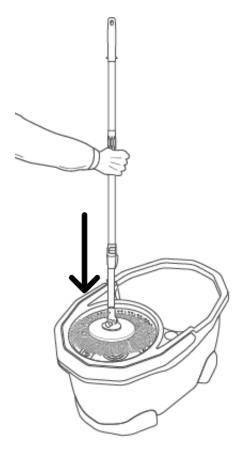

### **HOW TO OPERATE**

#### REMOVING THE MOP HEAD

- 1. While holding the rod, place the mop head flat on the floor.
- 2. Step on the fibers of the mop head.
- 3. Push the rod away from your body.
- 4. Lift and separate the disc from mop head.

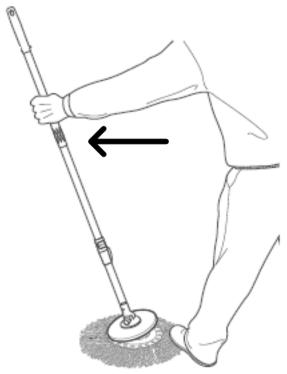

## **CLEANING & CARE**

- 1. Wipe the handle, rod and disc with a damp cloth, as needed.
- 2. The mop heads are machine washable. Air dry.
- 3. Ensure all parts are completely dry before storing.

#### WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2–4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Ginny's, Inc. 1112 7th Avenue Monroe, WI 53566

Customer Service: 800-544-1590 8:00 a.m. to Midnight CST, Monday through Friday