



2-SLICE/4-SLICE ESSENTIAL TOASTER User Guide

Item: 773875/773874



Ginnys.com • 800-544-1590

 *Facebook.com/GinnysBrand*

 *Pinterest.com/GinnysBrand*

Thank you for purchasing a Ginny’s Brand Essential Toaster. The classic design will fit in easily with any décor and look great on your counter. With convenient options for bagels, toasting frozen bread and reheating toasted items, this toaster has you covered—so bring on the French bread, waffles and frozen pastries! Enjoy!

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Toaster	5
How to Operate	6–7
Cleaning & Care	7
Warranty	8

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials and labels before first use. Dispose of the packaging materials via the appropriate recycling system.
- A short cord is provided to reduce the hazards resulting from tripping or entanglement. DO NOT drape the cord over a counter or tabletop where it can be pulled on or tripped over. DO NOT wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We DO NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.
- A fire may occur if this appliance is used near flammable materials, including curtains, towels, walls, etc. DO NOT place any paper, plastic or other nonfood items in the appliance.
- DO NOT place the appliance or its cord on or near a heated surface or in a heated oven.
- Always use this appliance on a stable, dry, heat-resistant surface.
- DO NOT use near water.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the appliance.
- Keep hands, hair and clothing away from all moving parts.
- Always use oven mitts when handling hot food or appliances. DO NOT attempt to move an appliance when it is hot or has hot contents.
- DO NOT use outdoors.
- DO NOT toast foods with butter spreads or frosting applied.
- DO NOT attempt to dislodge stuck food while the toaster is plugged in!
- Turn off and unplug this appliance when not in use.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Dispose of your old appliances using appropriate collection systems in accordance with federal and local regulations.

ELECTRICAL SAFETY

This appliance is equipped with a polarized plug in which 1 prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug will fit into a polarized outlet only 1 way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING	120V, 60Hz, 700/1400W
CORD LENGTH	30"
DIMENSIONS 2-slice toaster	6¼" W x 6¾" H x 9¼" D
MODEL 2-slice toaster	SLT-056
DIMENSIONS 4-slice toaster	10¾" W x 6¾" H x 9¼" D
MODEL 4-slice toaster	SLT-057

GET TO KNOW YOUR TOASTER



- 1. Slots
- 2. Carriage Lever
- 3. Cancel Button
- 4. Defrost Button
- 5. Reheat Button
- 6. Bagel Button
- 7. Removable Crumb Tray
- 8. Browning Level Dial

HOW TO OPERATE

Note: Before using the first time, operate the toaster twice **without food**. Remaining factory residue may burn off and result in minor smoke or smell, but this is normal.

TOAST

1. Place the food to be toasted in the slots (maximum thickness is 1¼").
2. Plug the cord into an electrical outlet.
3. Select the level of browning desired by turning the browning dial (1 is lightest, 7 is darkest). *Start with 3 the first time and adjust up or down per your preferences.*
4. Press down on the carriage lever until it stops. The grids inside the slots will tighten around the food to keep it off the heating elements.

Note: The lever will not stay down if the toaster is not plugged into an electrical outlet.

5. Press CANCEL at any time during the cycle to stop toasting.
6. Unplug the appliance after use and let it cool before handling/storing.

DEFROST allows you to toast frozen foods (bread, waffles or pastries).

1. Place the food to be defrosted and toasted in the slots (maximum thickness is 1¼").

Note: DO NOT attempt to defrost foods other than frozen bread, waffles or pastries with this toaster.

2. Plug the cord into an electrical outlet.
3. Select the level of browning desired by turning the browning dial (1 is lightest, 7 is darkest). *Start with 3 the first time and adjust up or down per your preferences.*
4. Press down on the carriage lever until it stops. The grids inside the slots will tighten around the food to keep it off the heating elements.
5. Press DEFROST.
6. Press CANCEL at any time during the cycle to stop defrosting/toasting.
7. Unplug the appliance after use and let it cool before handling/storing.

HOW TO OPERATE

REHEAT is used to warm up food that is already toasted.

1. Place the food to be heated in the slots (maximum thickness is 1¼").
2. Plug the cord into an electrical outlet.
3. Press down on the carriage lever until it stops. The grids inside the slots will tighten around the food to keep it off the heating elements.
4. Press REHEAT.
5. Press CANCEL at any time during the cycle to stop reheating.
6. Unplug the appliance after use and let it cool before handling/storing.

BAGEL toasts 1 side (only the outside elements heat up) for bagels or English muffins.

1. See diagram on top of toaster and place the food to be toasted in the slots accordingly (maximum thickness is 1¼").
2. Plug the cord into an electrical outlet.
3. Select the level of browning desired by turning the browning dial (1 is lightest, 7 is darkest). *Start with 3 the first time and adjust up or down per your preferences.*
4. Press down on the carriage lever until it stops. The grids inside the slots will tighten around the food to keep it off the heating elements.
5. Press BAGEL.
6. Press CANCEL at any time during the cycle to stop toasting.
7. Unplug the appliance after use and let it cool before handling/storing.

CLEANING & CARE

1. Turn off and unplug the toaster.
2. Always allow the appliance to cool completely before cleaning.
3. Remove the crumb tray(s) from the bottom of the toaster and wipe clean with a soft cloth. Replace.
4. Wipe the exterior of the toaster with a damp cloth, as needed.
5. DO NOT use abrasive brushes or pads, or harsh cleaning solutions.
6. DO NOT immerse any cord, plug or electrical appliance into water.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge provided the product is returned freight prepaid with proof of purchase to Ginny's. Allow 2–4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday