



4.3 CU. FT. UPRIGHT FREEZER User Guide

Item: 778452



Ginnys.com • 800-544-1590

 *Facebook.com/GinnysBrand*

 *Pinterest.com/GinnysBrand*

Thank you for purchasing this Ginny's Brand 4.3 Cu. Ft. Upright Freezer. Extra freezer storage is a life changer: buy food in bulk to save money, make meals ahead of time and freeze until needed or keep extra ice on hand for cold drinks on a hot day. The storage shelves keep everything where you can easily see it — no long-lost popsicles in the bottom corners!

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Freezer	5
How to Operate	6–8
Cleaning & Care	9–10
Troubleshooting	11
Warranty	12

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials and labels before first use.
- Before using, clean the shelves, drip tray and inside of freezer. See page 9 of this manual for details.
- DO NOT drape the cord where it can be pulled on or tripped over. DO NOT wrap the cord tightly around the appliance, as this could cause the cord to fray or break. DO NOT cover the cord with a rug.
- **DO NOT use an extension cord with this appliance.**
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN. DO NOT ALLOW CHILDREN TO CLIMB, STAND ON OR HANG ON THE DOOR OR SHELVES.
- Keep fingers out of the gap between the open door and cabinet.
- A fire may occur if this appliance is used near flammable materials, including curtains, towels, walls, etc. DO NOT place nonfood items in the freezer. DO NOT place the appliance or its cord on or near a heated surface.
- Always use this appliance on a stable, dry, heat-resistant surface.
- DO NOT use near water.
- DO NOT place freezer in extreme cold or hot temperatures (like in an uninsulated shed).
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the appliance.
- DO NOT use outdoors.
- Turn off and unplug this appliance when not in use. Turning the temperature dial to 0 stops cooling but DOES NOT shut off power.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Dispose of old appliances using appropriate collection systems in accordance with federal and local regulations.
- **BEFORE YOU DISPOSE OF A REFRIGERATOR OR FREEZER, REMOVE THE DOOR(S). KEEP THE SHELVES IN PLACE SO CHILDREN CANNOT EASILY CLIMB INSIDE.**


ELECTRICAL SAFETY

This appliance is equipped with a 3-prong grounding plug. This is a safety feature to reduce the risk of electrical shock. DO NOT use an extension cord with this appliance. It is recommended that an electrical outlet serving ONLY this appliance be used. This outlet must be properly installed and grounded. If you have any questions about the grounding or electrical instructions, contact a qualified electrician. DO NOT attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING	60Hz, 115V, 1.40A
CAPACITY	4.3 Cu. Ft.
CORD LENGTH	60"
DIMENSIONS	24" W x 36" H x 24 ³ / ₄ " D
MODEL	SLF-1142

GET TO KNOW YOUR FREEZER

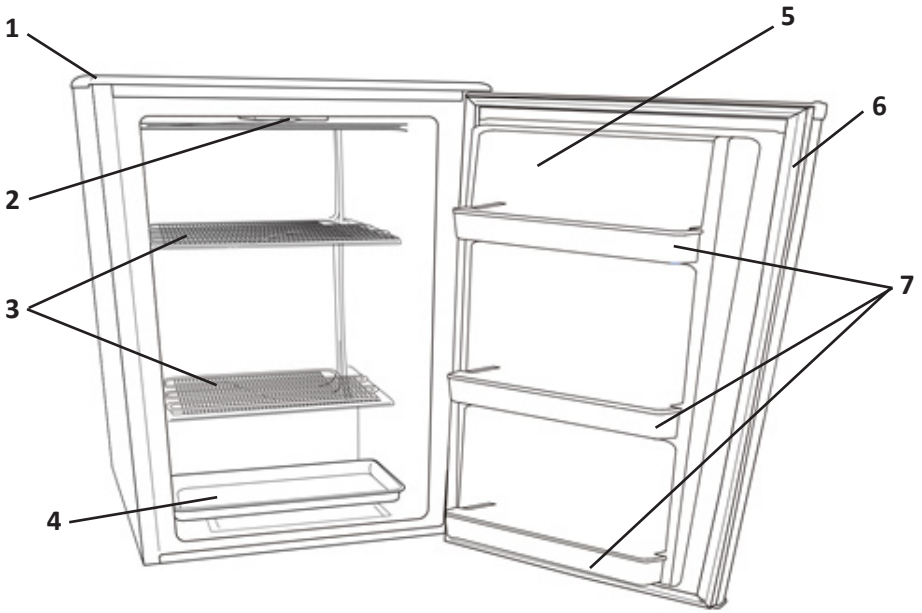

1. FREEZER CABINET
2. TEMPERATURE DIAL
3. SHELVES
4. DRIP TRAY
5. DOOR
6. MAGNETIC GASKET
7. DOOR BINS

HOW TO OPERATE


LOCATION

1. Select a location with a sturdy, level floor.
2. Allow 5" of space between the back of the freezer and wall.
3. Avoid placing the freezer in a narrow recess. Let air circulate freely around the cabinet.
4. Avoid direct sunlight and heat. Heat sources nearby will cause higher electricity consumption.
5. Avoid damp places. Too much moisture in the air will cause the inside to frost quickly and your freezer will have to be defrosted frequently.
6. To avoid overloading the circuit, this freezer should be the only appliance connected to the wall outlet.

DOOR REVERSAL INSTRUCTIONS

WARNING: To avoid personal injury to yourself and/or property, we recommend 2 people perform the door reversal process.

1. To access the lower hinge assembly, carefully tilt the freezer backward.

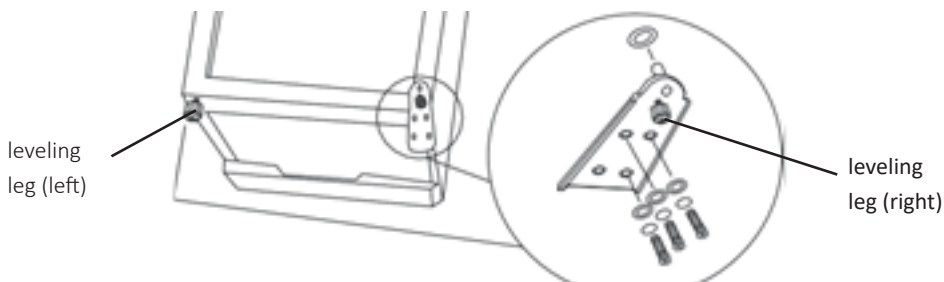


2. Remove both leveling legs located at the front of the freezer.
3. Remove the screws holding the lower hinge assembly to the cabinet.
4. Remove the door from the freezer cabinet.

(continued on next page)

HOW TO OPERATE

5. Using a flat-head screwdriver, remove the door top hinge pin.
6. Reinstall the door top hinge pin on the opposite side of the cabinet.
7. Remove the door plug and door bushing (located on top of the door) and install on the opposite side of the door.

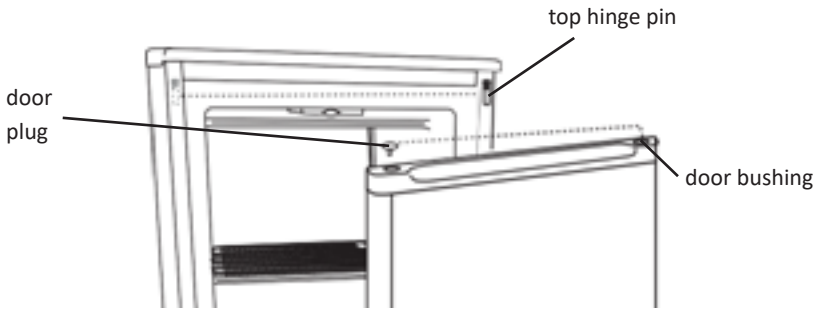

8. Attach the door to the opposite side of the cabinet.
9. Remove door bushing (bottom of the door) and install on opposite side.
10. Reinstall the lower hinge assembly on the opposite side. Make sure the door assembly is properly aligned on the cabinet before tightening the lower hinge screws.
11. Replace both leveling legs. To avoid vibration, set the cabinet level by adjusting the leveling legs.

HOW TO OPERATE

FREEZING

1. The temperature dial controls the temperature inside the freezer. To turn on the freezer, turn the dial to the desired cooling temperature (0=no cooling, 1=minimum cooling, 3–6=medium cooling and 7=maximum cooling).
2. The freezer motor will automatically cycle on and off to maintain the set temperature inside the freezer.
3. The freezer temperature will vary depending on the quantity of the food stored and on how frequently the door is opened.

Tips:

- Never place hot food in the freezer.
- Avoid overloading the freezer.
- Only open the door when necessary.

CLEANING & CARE

DEFROSTING

Complete defrosting and cleaning should be done at least once a year. In high humidity areas, a freezer may need more frequent defrosting and cleaning. Defrost and clean your freezer when frost has built up to about ¼" (6mm) thickness.

WARNING: DO NOT use an ice pick, knife or other sharp-pointed tool to defrost the freezer. Puncturing of refrigerant tubing may cause fire or explosion. Keep flammable materials and vapors, such as gasoline, away from the freezer. Use only nonflammable cleaners.

1. Turn temperature dial to 0 and unplug the power cord from the electrical outlet.
2. Remove all food (store frozen food in a cooler with ice).
3. Melt frost by propping the door open. Use the drip pan and towels to collect the water.
4. Wipe water from walls and bottom of freezer with a towel or sponge.

CLEANING

1. Wipe down shelves, drip tray and inside walls of freezer with a soft cloth and vinegar and water or baking soda and water.
2. Rinse with clean water on a clean cloth. Dry thoroughly.
3. Clean the outside of the cabinet with a soft, damp cloth and mild detergent.
4. **DO NOT immerse any electrical appliance, cord or plug into water.**
5. If planning to use the freezer again immediately after cleaning, plug in power cord and refer to page 8. Ensure the freezer is cooling properly before replacing frozen food.

CLEANING & CARE

POWER FAILURES

1. Short power failures (1 or 2 hours) should not affect your freezer temperature. Open the freezer door as little as possible while the power is off.
2. During longer power failures (more than 2 hours), remove the food to a chest cooler with ice or to another operating freezer.

VACATION OR STORAGE

1. For short vacation periods, leave the freezer on with the temperature dial at its normal setting.
2. For extended vacations or for storage:
 - a. Remove all food.
 - b. Turn temperature dial to 0 and disconnect power cord from the electrical outlet.
 - c. Defrost and clean the freezer thoroughly (see page 9).
 - d. Prop the door open to avoid possible formation of condensation, mold or odors while the freezer is off.

MOVING

1. Turn the temperature dial to 0 and disconnect the power cord from the electrical outlet.
2. Remove or securely fasten down all food inside the freezer.
3. To avoid damaging the leveling legs, turn them all the way into the base of the freezer.
4. When the freezer is in its new location, set the cabinet level by adjusting the leveling legs.
5. Plug the power cord into an electrical outlet and set the control dial to the desired temperature.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Freezer does not work	<ul style="list-style-type: none"> • No power to unit • Temperature set too warm • Wrong voltage is being used 	<ul style="list-style-type: none"> • Check connection of cord to power source • Increase the setting of the temperature dial • Use proper voltage
Freezer runs continuously	<ul style="list-style-type: none"> • Temperature is set too low • Door is not closed • Hot food recently put into freezer • Door opened too long or too often • Close proximity to heat source 	<ul style="list-style-type: none"> • Set temperature dial to warmer setting • Close door securely • Be sure food has cooled to room temperature before putting in freezer • Minimize door openings and duration • DO NOT place unit close to heat sources or direct sunlight
Internal temperature not cold enough	<ul style="list-style-type: none"> • No power to unit • Temperature is set too high • Door is not closed • Hot food recently put into freezer • Door opened too long or too often • Air flow obstruction • Wrong voltage is being used • Close proximity to heat source 	<ul style="list-style-type: none"> • Check connection of cord to power source • Reset temperature dial • Close door securely • Be sure food has cooled to room temperature before inserting • Minimize door openings and duration • Allow room for air to circulate around the unit • Use proper voltage • DO NOT place unit close to heat sources or direct sunlight

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge provided the product is returned freight prepaid with proof of purchase to Ginny's.

Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday