



MINI RETRO 6-CAN REFRIGERATOR User Guide

Item: 779188



Ginnys.com • 800-544-1590

 *Facebook.com/GinnysBrand*

 *Pinterest.com/GinnysBrand*

Thank you for purchasing a Ginny’s Brand Mini Retro 6-Can Refrigerator. Keep snacks, medications or up to 6 cans cold—at home, at work or on the road! This portable refrigerator is fully insulated and comes with cords to plug into a regular electrical outlet or into your car. It chills to approximately 32° F below ambient room temperature. Enjoy!

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Refrigerator	5
How to Operate	6
Cleaning & Care	7
Warranty	8

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials and labels before first use.
- Wipe down the inside of the refrigerator with a damp cloth before first use. See Cleaning & Care.
- Always attach the cord to the appliance first, then to the outlet/receptacle. DO NOT drape the cord over a counter or tabletop where it can be pulled on or tripped over. DO NOT wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We DO NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.
- Keep unit away from fire or other flammable substances. DO NOT place the appliance or its cord on or near a heated surface or in a heated oven.
- Always use this appliance on a stable, dry, heat-resistant surface.
- DO NOT use near water.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the appliance.
- DO NOT use outdoors.
- Turn off and unplug this appliance when not in use.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Dispose of old appliances using appropriate collection systems in accordance with federal and local regulations.

ELECTRICAL SAFETY

This appliance is equipped with 2 power cords:

1. One cord has a polarized AC plug in which 1 prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug should be attached to the appliance before connecting to an electrical outlet. The plug will fit into a polarized outlet only 1 way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician.
2. The second cord and plug will fit into a 12V DC receptacle (commonly found in most vehicles). The plug should be attached to the appliance before connecting to a receptacle.

DO NOT attempt to modify the plugs in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING AC	120V, 60Hz, 48W
POWER RATING DC	12V, 3.3A, 40W
CAPACITY	.14 Cu. Ft.
DIMENSIONS	7" W x 10¼" H x 9½" D
MODEL	EFMIS129-GB

GET TO KNOW YOUR REFRIGERATOR



(Back View)

- | | |
|--------------------|-------------------------|
| 1. Cabinet | 9. Fan/Vent |
| 2. Air Vent (2) | 10. Power Light |
| 3. Folding Handle | 11. Power Switch |
| 4. Door | 12. DC Port |
| 5. Door Latch | 13. AC Port |
| 6. Sealing Gasket | 14. DC Cord (not shown) |
| 7. Window | 15. AC Cord (not shown) |
| 8. Removable Shelf | |

HOW TO OPERATE

1. Attach the power cord to the refrigerator (use either the AC or DC cord) and plug the cord into an electrical outlet or DC receptacle. Make sure the power switch is set to OFF for over 5 minutes before changing to COLD.
2. When the cooling function is on, keep in a well-ventilated area. DO NOT block any vents on the unit.
3. DO NOT place the refrigerator under direct sunlight or near other heat sources (like radiators or heat registers).
4. DO NOT let water get into the vents.

WARNING: DO NOT store meats, poultry, fish or dairy products that may spoil for more than 1 hour.

CLEANING & CARE

1. Turn off and unplug the refrigerator.
2. DO NOT use abrasive brushes or pads, or harsh cleaning solutions.
3. Wash the removable shelf in warm soapy water.
4. Wipe the interior and exterior of the unit with a damp cloth, as needed.
If odors persist, use baking soda on the damp cloth.
5. Keep the unit OFF and unplugged with the door open after cleaning to allow the interior to thoroughly dry.
6. The vents should be cleaned periodically with a clean paint brush or other soft-bristled brush (remove dust or hair).
7. DO NOT immerse any cord, plug or electrical appliance into water.
8. For long periods of storage, a small container of baking soda should be placed inside the refrigerator to eliminate odors.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge provided the product is returned freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Intertek

Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday