

CHEF 2-SLICE TOASTER

Item: 780360



Customer Service 800-356-9090

Thank you for purchasing this Chef 2-Slice Toaster. This appliance is designed to perform to the highest standards and will provide you with many years of superior performance.

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Toaster	4
How to Operate	5–6
Cleaning & Care	6
Returns & Warranty Information	7–8

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials and labels before first use.
- A short cord is provided to reduce the hazards resulting from tripping or entanglement. DO NOT drape the cord over a counter or tabletop where it can be pulled on or tripped over. DO NOT wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We DO NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.
- Keep hands, hair and clothing away from all moving parts.
- Keep hands, hair and clothing away from all hot surfaces.
- A fire may occur if this appliance is used near flammable materials, including curtains, towels, walls, etc. DO NOT place any paper, plastic, or other non-food items in the appliance.
- DO NOT place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a stable, dry surface.
- DO NOT use near water. DO NOT use this appliance with wet hands.
- DO NOT use an accessory or attachment not recommended by the manufacturer, as this may cause injury or damage the appliance.
- DO NOT use outdoors.
- DO NOT use metal forks or knives to retrieve food from the toaster slots.
- DO NOT force oversized bread or other foods into slots.
- DO NOT leave the appliance unsupervised.
- Turn off and unplug when not in use.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Dispose of old appliances using appropriate collection systems in accordance with federal and local regulations.


ELECTRICAL SAFETY

This appliance is equipped with a polarized plug in which 1 prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug will fit into a polarized outlet only 1 way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way. The manufacturer cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING	120V, 60Hz, 850W
CORD LENGTH	24"
DIMENSIONS	6½" W x 7½" H x 11¼" D
MODEL	SLT-078

GET TO KNOW YOUR TOASTER

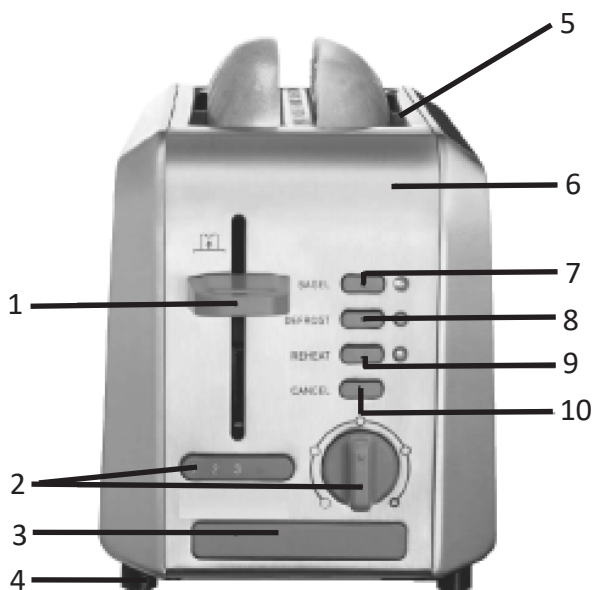

1. Carriage Lever
2. Browning Display/Dial
3. Removable Crumb Tray
4. Feet (4)
5. Slots (2)
6. Housing
7. Bagel Button
8. Defrost Button
9. Reheat Button
10. Cancel Button

HOW TO OPERATE

Note: During the first use, it is normal to notice smoke and/or a slight odor.

TOASTING BREAD

1. Plug the toaster into an electrical outlet.
2. Insert the slice(s) into the slot(s) and select the desired browning level (1=lightest, 5=darkest).

Note: Fresh or coarse bread may require longer toasting (a darker browning level) than drier breads.

3. Push the carriage lever down until it locks into position.
4. When the toasting cycle is done, the toast will automatically pop up and the toaster will turn off.
5. Lift the carriage lever upward to safely remove the toast.
6. Unplug the power cord from the outlet.

TOASTING BAGELS

1. Plug the toaster into an electrical outlet.
2. Insert the bagel halves into the slot(s) and select the desired browning level.
3. Push the carriage lever down until it locks into position.
4. Press BAGEL. The toaster will lightly toast all sides of the bagel halves.
5. When the cycle is done, the bagel halves will automatically pop up and the toaster will turn off.
6. Lift the carriage lever upward to safely remove the bagel halves.
7. Unplug the power cord from the outlet.

TOASTING FROZEN BREAD

1. Plug the toaster into an electrical outlet.
2. Insert frozen bread (or waffles) into the slot(s) and select the desired browning level.
3. Push the carriage lever down until it locks into position.
4. Press DEFROST. The toaster will defrost, then toast the bread.
5. When the cycle is done, the toast (or waffles) will automatically pop up and the toaster will turn off.
6. Lift the carriage lever upward to safely remove the toast.
7. Unplug the power cord from the outlet.

HOW TO OPERATE

REHEATING TOAST

1. Plug the toaster into an electrical outlet.
2. Insert the cold toast into the slot(s) and select the desired browning level.
3. Push the carriage lever down until it locks into position.
4. Press REHEAT. The toaster will reheat the toast, but not overcook it.
5. When the cycle is done, the toast will automatically pop up and the toaster will turn off.
6. Lift the carriage lever upward to safely remove the toast.
7. Unplug the power cord from the outlet.

CANCEL

Press CANCEL at anytime to stop/interrupt any function.

CLEANING AND CARE

1. Turn off and unplug the appliance.
2. Allow the toaster to cool completely before cleaning.
3. DO NOT use abrasive pads or cleaners.
4. The outside surface of the toaster may be cleaned with a damp cloth. Dry with a soft cloth.
5. Empty the crumb tray at least once per week and wipe it with a soft cloth. DO NOT operate the toaster without the crumb tray in place.
6. NEVER IMMERSE THE TOASTER, PLUG OR CORD INTO WATER OR ANY OTHER LIQUID.

RETURNS

If any item, for any reason, does not meet your expectations, just return it to us. We'll gladly either:

- Refund your merchandise amount
- Credit your account
- Send a replacement

You can return any unused item in its original packaging within 60 days of its receipt for a full refund of the purchase price (excluding shipping and handling charges).

Please send returns to:

**Customer Returns
2000 Harrison Suite 100
Clinton, IA 52732-6676**

When returning an item:

- Use the original packaging and pack it securely.
- Please adequately insure your item in case you need to make a claim with the carrier you choose for returning your item.
- Include your order number and reason for return.
- We recommend keeping the receipt for 4 weeks.

1 YEAR LIMITED WARRANTY

This product is to be free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, we will repair or replace, at our option, defective parts of this product at no charge provided the product is returned freight prepaid with proof of purchase.
Allow 2–4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Customer Service
8:00 am to Midnight CST, Monday through Friday
1-800-356-9090



Intertek