Montgomery® Ward

Montgomery Ward Breathe easy!



Instruction Manual

Montgomery Ward Customer Service 8:00 am to Midnight, Monday through Friday

Item: 782652

Wards.com 1•888•557•3848

Wards.com 1.888.557.3848



Thank you for purchasing your Montgomery Ward Air Purifier. Put through the paces by the experts, we guarantee that it will perform to the highest standard, time after time, with all the convenience and durability you rely on from Wards.

Table of Contents

Important Safeguards	3
Electrical Safety	4
Specifications	4
Parts & Features	5
How to Use	6-7
Cleaning & Care	8-9
Troubleshooting	10
Notes	11
Return Information	12
Warranty	13

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!


- FOR HOUSEHOLD USE ONLY. DO NOT use this appliance for other than its intended use.
- Remove all packaging materials and labels before first use. Dispose of the packaging materials via the appropriate recycling system.
- Never run the air purifier unless it is fully assembled.
- DO NOT drape the cord over a counter or tabletop where it can be pulled on or tripped over. Never wrap the cord tightly around the appliance, as this could cause the cord to fray or break. DO NOT cover the cord with a rug.
- We DO NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.
- A fire may occur if this appliance is used near flammable materials, including curtains, towels, walls, etc. DO NOT place any paper, plastic or other items in the appliance. DO NOT place the appliance or its cord on or near a heated surface or in a heated oven.
- This appliance should always be used on a stable, dry, heat-resistant surface.
- DO NOT operate the product in a greasy environment such as in the kitchen. This product is not intended to filter oil or grease from air.
- DO NOT use near water. DO NOT use the air purifier in bathrooms or other humid environments.
- DO NOT use near fireplaces or in areas where flammable or combustible vapors or products may exist.
- DO NOT use an accessory or attachment not recommended by Wards as this may cause injury, or damage the appliance.
- Keep hands, hair and clothing away from all openings and moving parts.
- NEVER touch the air purifier or its cord with wet hands.
- DO NOT use outdoors.
- DO NOT use this air purifier with any solid state speed control device.
- Turn off and unplug this appliance when not in use.
- THER ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances/tools contain valuable materials that can be recycled. Dispose of old appliances/tools using appropriate collection systems in accordance with federal and local regulations.



Electrical Safety


This appliance is equipped with a polarized plug in which one prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Montgomery Ward can not accept any liability for damage or injury resulting from failure to observe these safety procedures.

Parts & Features

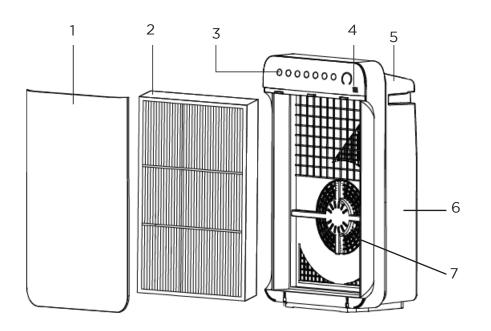

Specifications

POWER RATING	120V, 60Hz, 105W
CORD LENGTH	70″
DIMENSIONS	13.62″ W x 22.5″ H x 7″ D
MODEL	MW1000

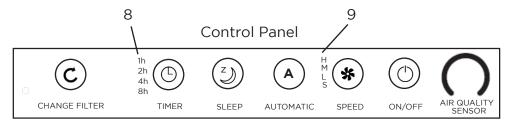

- 1. Front Cover
- 2. True HEPA Filter (11½" W x 17¾" H x 1" D)
- 3. Control Panel
- 4. Air Quality Sensor
- 5. Vent
- 6. Housing
- 7. Fan
- 8. Timer Indicator Lights
- 9. Fan Speed Indicator Lights

4

How to Use

THIS AIR PURIFIER:

- has a true HEPA filter, which captures at least 99.97% of allergens and irritants down to 0.1 microns and lasts up to twelve months, depending on use and environmental conditions.
- removes smoke, pollen, dust, animal dander and dust mites from the air.

SET UP

- 1. Install the unit where all sides are at least 12" away from any walls, curtains or furniture.
- 2. DO NOT position the unit where a fan or air conditioner blows directly on the air purifier.
- 3. Ensure the true HEPA filter is properly installed before use.

OPERATION

- 1. Plug the unit into an electrical outlet.
- 2. Press ON/OFF to turn on the air purifier.
- 3. The default fan speed is low.

CHANGE FILTER

When this lights up, replace the true HEPA filter. To reset the filter indicator, press CHANGE FILTER for 3 seconds. The CHANGE FILTER light will flash 3 times and then turn off completely, indicating the unit has been reset.

TIMER

When the unit is on, press TIMER to limit the run time (1, 2, 4 or 8 hours). The indicator light will show which is selected. When the timer is set, the unit will automatically turn off when the time expires. To cancel, press TIMER until no indicator lights are lit.

SLEEP

Press SLEEP to quiet fan and turn off the LED lights on the unit. ON/OFF indicator will remain lit. Press AUTOMATIC or SPEED to turn off the function.

AUTOMATIC

Press AUTOMATIC to activate the air monitoring system. The unit will monitor the air quality and automatically adjust the fan speed to remove the air contaminants.

SPEED

The default fan speed is low (L). To adjust the fan, press SPEED. The speed selected determines how rapidly you want to sanitize the air: use low (L) and medium (M) for everyday use, high (H) for areas with more airborne contaminants (smoke, pet dander, etc.) or areas used frequently by allergy-sufferers, or silent (S) for quiet operation. The indicator light will show which speed is selected.


AIR QUALITY SENSOR

This lights to notify you of the air quality. Red is poor, orange is fair and blue is good quality air. When you press AUTOMATIC, the fan speed automatically adjusts to the air quality detected: high fan speed for red, medium fan speed for orange and low fan speed for blue.


Cleaning & Care

Cleaning & Care (cont.)


- 1. Turn off and unplug the unit.
- 2. DO NOT use abrasive brushes, pads or harsh cleaning solutions.
- 3. Wipe the exterior of the housing with a damp cloth, as needed.
- $4.\ \mbox{DO}\ \mbox{NOT}\ \mbox{immerse}\ \mbox{any electrical appliance, power cord or plug into water.}$
- 5. We recommend replacing the filter every 12 months or when the change filter light comes on. Filter size is 11 " W x 17 " H x 1" D.
 - a. While facing the front of the unit, grasp the front cover at the bottom and pull forward. Gently lift the cover up and away from the housing.

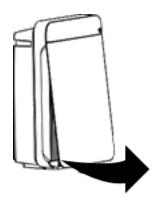

b. Remove the true HEPA filter by pulling on the top and bottom ribbons.

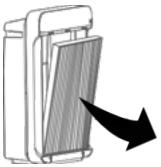


- c. Insert a new true HEPA filter (with the ribbons facing you).
- d. To close the front cover, ensure the top hooks are properly in place, then snap the bottom shut.

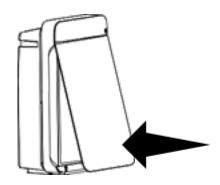

6. Clean the air quality sensor if the LED remains frozen on one light color.a. Power off and unplug the unit.

- b. Locate the air sensor grill located at the top right front of the unit.
- c. Use a vacuum cleaner hose to suction any dust or dirt that may have accumulated inside the sensor.

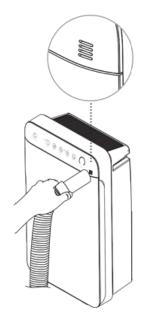

Troubleshooting

PROBLEM	REASON	SOLUTION
Unit won't operate.	Unit is off.	Press ON/OFF.
	Unit is unplugged.	Plug in unit.
	The front cover is not properly installed.	Check to ensure the filter is in place and the cover is installed properly.
The air quality sensor LED stays red or yel- low, but the air quality is good.	The sensor has become dirty.	Clean the air sensor with a vacuum (see page 9).
The CHANGE FILTER light has come on and won't turn off.	This light indicates that the filter needs to be replaced.	 Remove and replace the filter. Press and hold CHANGE FILTER to reset and turn off light.
Reduced air flow or poor filtering.	The vent is blocked.	Ensure nothing is cover- ing the vent.
	Walls, furniture or drapes are closer than 12" to the unit.	Ensure nothing is too close to the unit.
	The HEPA filter may be clogged.	Check filter and replace if necessary.

Returns

If any item, for any reason, does not meet your expectations, just return it to us. We'll gladly either:

- Refund your merchandise amount
- Credit your account
- Send a replacement

You can return any unused item in its original packaging within 60 days of its receipt for a full refund of the purchase price (excluding shipping and handling charges).

Please send returns to:

Montgomery Ward, Inc. Attn: Customer Returns 2000 Harrison Suite 100 Clinton, IA 52732-6676

When returning an item:

- Use the original packaging and pack it securely.
- Please adequately insure your item in case you need to make a claim with the carrier you choose for returning your item.
- Include your order number and reason for return.
- We recommend keeping the receipt for 4 weeks.

Montgomery®

🚃 1 Year Limited Warranty 🚍

Montgomery Ward, Inc. warrants this product to be free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Montgomery Ward will repair or replace, at its option, defective parts of this product at no charge provided the product is returned freight prepaid with proof of purchase to Montgomery Ward. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

> Montgomery Ward Customer Service 8:00 am to Midnight CST, Monday through Friday

Wards.com 1.888.557.3848