



## 3.2 Cu. Ft. Retro Refrigerator User Guide

Item: 788379



***Ginnys.com • 800-544-1590***

** *Facebook.com/GinnysBrand***

** *Pinterest.com/GinnysBrand***

---

---

Thank you for purchasing this Ginny's Brand 3.2 cu. ft. Retro Refrigerator. The compact design is perfect for any small space, and the Ginny's name will give you peace of mind for years to come. Enjoy!

---

---

## TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Appliance	5
Installation	6
How to Operate	7
Cleaning & Care	8–10
Helpful Hints	11
Troubleshooting	12–13
Notes	14–15
Warranty	16

# IMPORTANT SAFEGUARDS

## **READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!**

- FOR HOUSEHOLD USE ONLY. DO NOT use this appliance for other than its intended use.
- Remove all packaging materials and labels before first use. Dispose of the packaging materials via the appropriate recycling system.
- Wash all removable parts before first use. Wipe interior of refrigerator and freezer with a damp cloth.
- A short cord is provided to reduce the hazards resulting from entanglement or tripping. DO NOT drape the cord where it can be pulled on or tripped over.
- **DO NOT use an extension cord with this appliance.**
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS REFRIGERATOR NEAR CHILDREN. DO NOT ALLOW CHILDREN TO CLIMB, STAND ON OR HANG ON THE DOORS OR SHELVES. BE CAREFUL CLOSING DOORS WHEN CHILDREN ARE IN THE AREA.
- A fire may occur if this appliance is used near flammable materials, including curtains, towels, walls, etc.
- DO NOT store nonfood items in the refrigerator or freezer.
- DO NOT place the appliance or its cord on or near a heated surface.
- This appliance should always be used on a stable, dry, heat-resistant surface.
- DO NOT use near water.
- DO NOT place this appliance in environments with extreme cold or hot temperatures.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the appliance.
- DO NOT use outdoors.
- Turn off and unplug this appliance when not in use. Turning the temperature control dial to 0 stops cooling but DOES NOT shut off power to the appliance.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances contain valuable materials that can be recycled. Dispose of old appliances using appropriate collection systems in accordance with federal and local regulations.
- **BEFORE YOU DISPOSE OF A REFRIGERATOR OR FREEZER, TAKE OFF THE DOORS. LEAVE THE SHELVES IN PLACE SO THAT CHILDREN MAY NOT EASILY FIT INSIDE.**

# ELECTRICAL SAFETY

 
This appliance is equipped with a 3-prong grounding plug. This is a safety feature to reduce the risk of electrical shock. DO NOT use an extension cord with this appliance. It is recommended that an electrical outlet serving ONLY this appliance be used. This outlet must be properly installed and grounded. If you have any questions about the grounding or electrical instructions, contact a qualified electrician. DO NOT attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

## SPECIFICATIONS

POWER RATING	115V, 60Hz, 60W, 1.0A
CAPACITY	.95 Cu Ft (freezer), 2.25 Cu Ft (refrigerator)
CORD LENGTH	72" +/- 6"
DIMENSIONS	17 <sup>3</sup> / <sub>4</sub> " W x 33 <sup>3</sup> / <sub>4</sub> " H x 21 <sup>1</sup> / <sub>4</sub> " D +/- 1"
MODEL	FR391-BLACKSS-GB, FR391-REDSS-GB

# GET TO KNOW YOUR APPLIANCE

(Actual refrigerator/freezer may vary slightly.)

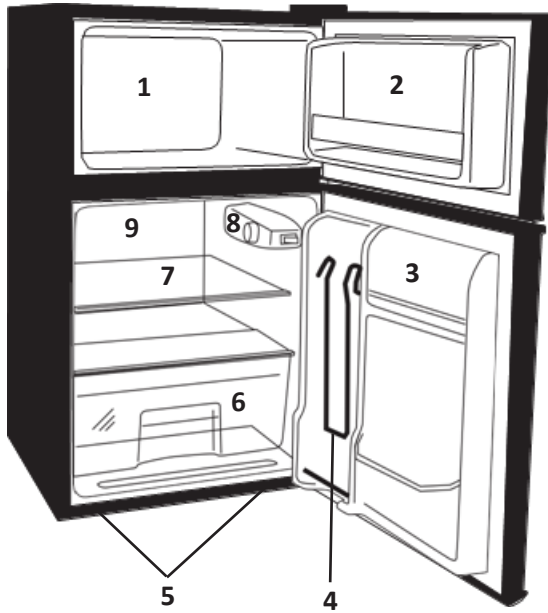


1. Freezer Compartment
2. Freezer Door with Shelf
3. Refrigerator Door with Shelves
4. Can Storage
5. Leveling Legs (2)
6. Crisper Drawer
7. Refrigerator Shelves (2)
8. Temperature Control Dial and Interior Light
9. Refrigerator Compartment
10. Plastic Scraper (not shown)
11. Plastic Ice Cube Tray (not shown)
12. Door Handles and Bases (2 each, not shown)

# INSTALLATION

 **WARNING:** Risk of fire or explosion due to puncture of refrigerant tubing (flammable refrigerant used). Handle with care when moving refrigerator to avoid damaging the tubing or increasing the risk of a leak.

1. Select a suitable location for the refrigerator on a hard, even surface, away from direct sunlight or heat sources.
2. DO NOT install your refrigerator in any location not properly insulated or heated. This refrigerator was not designed to operate in temperature settings below 55° F.
3. Always install the refrigerator in a location where there is proper air circulation and an electrical outlet. We recommend 2" clearance from all walls or other appliances on top and back, and 1" clearance on the sides.
4. Attach a base (for a handle) to the refrigerator and freezer doors with the screws provided. Slide the handle horizontally to securely attach to each base.
5. Your refrigerator has 2 leveling legs which are located in the front bottom corners of the appliance. After properly placing the refrigerator in its final position, level the refrigerator by turning the legs counterclockwise to raise the refrigerator or clockwise to lower it. (The refrigerator door will swing closed more easily when the leveling legs are extended.)
6. To align the doors (if needed):
  - a. Remove the top hinge cover.
  - b. Loosen the top hinge screws using a phillips head screwdriver.
  - c. Adjust the door or put a spacer in between and then tighten the screws.
  - d. Replace the top hinge cover.

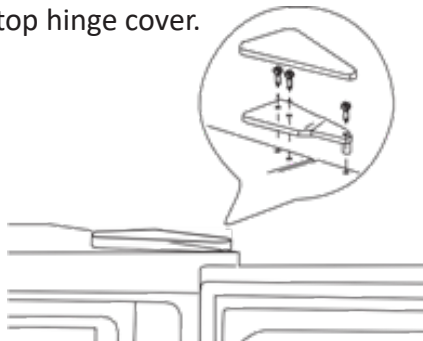


# HOW TO OPERATE

**Note:** The doors on this refrigerator are not reversible.

**Note:** If the appliance has been placed in a horizontal or tilted position for any period of time, wait 24 hours before plugging the unit in.

 1. Plug the cord into an electrical outlet.
2. This appliance has 1 temperature control dial for both the freezer and refrigerator compartments. Temperature will automatically be maintained per the setting you select. 0 is OFF, 1 is the warmest, 5 is the coldest. Begin by setting the dial to 3 and allow 24 hours to pass before adjusting the temperature, as needed.
3. To remove or replace a refrigerator shelf, gently tilt the shelf up and slide forward.

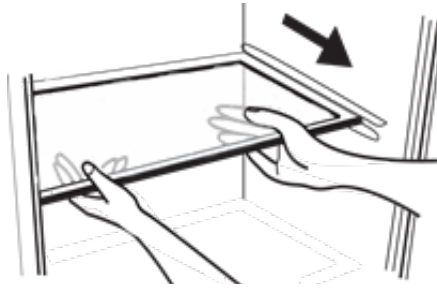

4. This refrigerator is equipped with a convenient can dispenser. Load the cans from the top. To dispense, draw a can out from the bottom.
5. This refrigerator has a clear crisper drawer for vegetables. To open and close, grasp the handle of the drawer and slide in or out.

# CLEANING & CARE

**WARNING:** After your refrigerator/freezer is in operation, **DO NOT** touch the cold surfaces in the freezer compartment (especially with wet hands). Skin may adhere to these extremely cold surfaces.

## **DEFROSTING**

Defrost the freezer compartment whenever frost accumulates to a thickness of  $\frac{1}{4}$ " or more on freezer walls. Frost tends to accumulate more during the summer months or in humid areas.

1. Remove food and ice cube tray from the freezer compartment.
2. Turn the temperature control dial to 0. Defrosting may take a few hours.
3. Keep the freezer door open and place a bowl of warm water in the freezer compartment.

**WARNING:** There is a risk of fire or explosion if the refrigerant tubing is punctured. **DO NOT** use metal or sharp instruments to defrost freezer.

 
4. Use a towel to wipe up dripping water. **DO NOT** leave unattended (a puddle may form on the floor and become a slip hazard).
5. After defrosting, wipe down the interior of the freezer. For thorough cleaning instructions, see page 9.
6. Reset the temperature control dial to the desired temperature and return food to the freezer compartment.



# CLEANING & CARE

## **CLEANING**

1. Turn off and unplug the appliance.
2. Prepare a cleaning solution of 3–4 Tbsp. baking soda mixed with 1 qt. warm water. Use a sponge or soft cloth, dampened with the cleaning solution, to wipe down the interior of the refrigerator and freezer (after defrosting freezer). **DO NOT** use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads.
3. Rinse with clean warm water and dry with a soft cloth.
4. Wipe the exterior and door gaskets with a damp cloth and wipe dry. Gaskets may also be removed for easier cleaning. Make sure they are completely dry before reattaching. **DO NOT** operate the refrigerator or freezer without the gaskets.

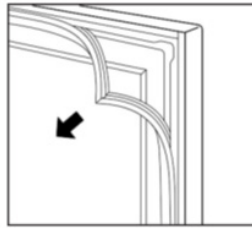

5. The compressor located at the rear of the refrigerator should be cleaned at least once per year. Dust off the compressor with a brush.
6. **DO NOT** immerse any electrical appliance, cord or plug into water.

## **LIGHT BULB REPLACEMENT**

1. Turn the temperature control dial to 0.
2. Gently pull off the light cover.
3. Replace with same type light bulb rated at 10 watts.
4. Put the cover back into place.

# CLEANING & CARE

## ***POWER INTERRUPTIONS***

1. Remove the power cord from the electrical outlet when a power outage occurs.
2. Avoid opening the refrigerator and freezer doors while power is out.
  - a. If outage is for 2–3 hours, plug the power cord back into the outlet when power is restored.
  - b. If outage is for a prolonged period, inspect and discard spoiled or thawed food in freezer and refrigerator. Clean freezer/refrigerator before using (instructions above).

## ***VACATION***

For long vacations or absences, empty food from refrigerator and freezer and set the temperature dial to 0. Unplug and clean the refrigerator and freezer (instructions on page 9). Prop doors open so air can circulate inside.

## ***MOVING***

When moving, always move the refrigerator vertically. DO NOT move with the unit lying down or in a horizontal position—possible damage to the sealed system could occur. After the move, wait 24 hours before plugging in and using.

# HELPFUL HINTS

- When storing fresh food, be sure to wrap or put food in airtight and moisture-proof material unless otherwise instructed. This will ensure proper shelf life and prevent the transfer of odors and tastes.
- Packaging recommendations: containers with airtight lids, heavy-duty aluminum foil and self-sealing plastic or silicone bags.
- Eggs should be stored in the refrigerator in an upright position in their original carton.
- Hot food should be allowed to cool before storing in the freezer or refrigerator. This will prevent unnecessary energy use.
- When storing meats, keep in the original packaging or rewrap as necessary. Mark with an expiration date.
- Foods will keep longer in the freezer in air-tight packages. Improper storage will result in dryness, freezer burn and odor/taste transfer.
- DO NOT refreeze foods which have been thawed completely.

# TROUBLESHOOTING

## **Normal operating sounds you may hear:**

- Gurgling sounds or slight vibrations are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.

## **Appliance does not operate:**

- Check if temperature control setting is too low.
- Check if refrigerator is plugged in.
- Check the circuit breaker.

## **Food temperature is too warm:**

- Frequent door openings.
- Allow time for recently added warm food to reach new temperature.
- Check gaskets for proper seal.
- Adjust temperature control to colder setting.

## **Food temperature is too cold:**

- If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.

## **Refrigerator runs too frequently:**

- This may be normal to maintain constant temperature during hot days.
- Doors may have been opened frequently or for an extended period of time.
- Check gasket for proper seal.
- Check to see if doors are completely closed.

## **Moisture buildup on interior or exterior:**

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

## **Interior odor:**

- Interior needs cleaning (see page 9).
- Foods improperly wrapped or sealed are giving off odors.

# TROUBLESHOOTING

## **Doors do not shut properly:**

- Level the legs (see page 6, #5).
- Realign door (see page 6, #6).
- Check for blockages (food containers, crisper, shelves, etc.).
- The refrigerator is touching the wall. Move 1–2" from walls.

## **Popping or cracking sound when the compressor comes on:**

- Level the legs.
- The floor may be uneven or weak. Be sure the floor can adequately support the appliance.

## **Refrigerator light does not work:**

- Check power supply.
- Tighten bulb in socket.
- Replace burned out bulb (see page 9).





# WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge provided the product is returned freight prepaid with proof of purchase to Ginny's.

Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



**Intertek**

Ginny's, Inc.  
1112 7th Avenue  
Monroe, WI 53566

Customer Service: 800-544-1590  
8:00 a.m. to Midnight CST, Monday through Friday