



**CORDLESS MULTI-FUNCTION  
LIGHTWEIGHT VACUUM CLEANER**  
**User Guide**

Item: 788547



***Ginnys.com • 800-544-1590***

** *Facebook.com/GinnysBrand***

** *Pinterest.com/GinnysBrand***

---

---

Thank you for purchasing a Ginny's Brand Cordless Multi-Function Lightweight Vacuum Cleaner. This versatile vacuum cleaner is easy to handle and will fit all of your quick-cleanup needs. The swivel head gets into the tightest corners and the lift-off hand vacuum does the rest—all with cordless ease!

---

---

## TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Appliance	4–5
How to Operate	6–7
Cleaning & Care	8
Notes	9–11
Warranty	12

# IMPORTANT SAFEGUARDS

## **READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!**

- FOR HOUSEHOLD USE ONLY. DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS INTENDED USE.
- Remove all packaging materials before first use.
- DO NOT drape the cord for the charging base over a counter or tabletop where it can be pulled on or tripped over. DO NOT cover the cord with a rug. DO NOT allow the cord to come in contact with sharp objects or hot surfaces.
- We DO NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION IS NECESSARY WHEN USING THIS APPLIANCE NEAR CHILDREN.
- Read and familiarize yourself with all operating instructions before using this vacuum cleaner.
- DO NOT use this vacuum cleaner without the filter and dust bin in place.
- DO NOT operate with wet hands.
- DO NOT use near water. DO NOT immerse the appliance or its charging base and cord in water or any other liquids.
- DO NOT use an accessory or attachment not recommended by Ginny's, as this may cause injury or damage the appliance.
- Keep hands, feet, hair and clothing away from all moving parts.
- DO NOT vacuum liquids.
- DO NOT vacuum broken glass, hot cigarettes, matches or hot ashes.
- DO NOT block any vents or openings.
- DO NOT vacuum flammable or explosive substances.
- DO NOT use near flammable vapors or other toxic materials.
- DO NOT use outdoors.
- Turn off and unplug this appliance when in storage.
- THERE ARE NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- Appliances/tools contain valuable materials that can be recycled. Dispose of old appliances/tools using appropriate collection systems in accordance with federal and local regulations.

# ELECTRICAL SAFETY

This appliance is equipped with a polarized plug in which 1 prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug should be attached to the charging base before connecting to an electrical outlet. The plug will fit into a polarized outlet only 1 way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

## SPECIFICATIONS

ADAPTER INPUT	AC 100–240V/50–60Hz
ADAPTER OUTPUT	DC 35V/.5A
BATTERY CAPACITY	2200mAh/29.6V
CHARGING TIME	4–5 hrs.
DUST BIN CAPACITY	16 oz.
DIMENSIONS/WEIGHT	9" W x 44" H x 5" D/6.82 lbs.
MODEL	SVC-185

## GET TO KNOW YOUR APPLIANCE

1. Handle
2. Power button
3. High Suction Button
4. Low Suction Button
5. Roller/Lights Button
6. Elbow
7. Hand Vacuum Release
8. Hand Vacuum Cleaner
9. Hand Vacuum Power Button
10. Dust Bin Release
11. Battery Indicator Lights
12. Dust Bin with Filter
13. Brush Head
14. Roller Brush/Lights
15. Charging Base
16. Hand Vacuum Tools (2, not shown)

# GET TO KNOW YOUR APPLIANCE

Main body of vacuum cleaner on charging base with hand vacuum cleaner attached




# HOW TO OPERATE

## **LI-ION BATTERY PACK (Built into hand vacuum cleaner)**

- The battery is the power source for the appliance. When it is connected to the appliance, **DO NOT** carry the appliance with your finger on the power button.
- **DO NOT** charge the appliance with the power on.
- Disconnect the hand vacuum cleaner from the main body before making any adjustments, cleaning or troubleshooting.
- Use only the battery and charger supplied with this vacuum cleaner.
- When not in use, keep battery away from all metal objects.
- **DO NOT** expose battery to temperatures above 266° F.
- **DO NOT** store the battery in temperatures below 37.4° F or above 104° F.

## **ASSEMBLY**

1. Unfold and straighten the main body until the handle “clicks” into place.
2. Insert the brush head into the the bottom of the main body.  
To release the head again, press the button shown in figure A.
3. Make sure the lock shown in figure B is in place. This secures the roller brush.

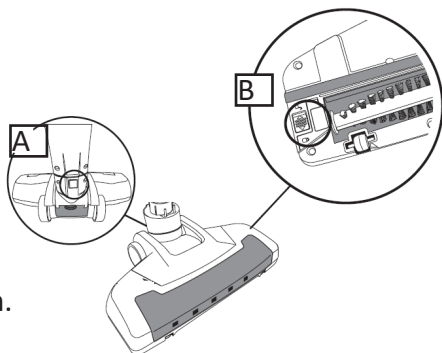

## **CHARGING THE VACUUM CLEANER**


1. Attach the power cord to the charging base and plug it into an electrical outlet.
2. Hold the vacuum in a vertical position and set the brush head down onto the charging base as shown in figure C. The vacuum will hang on the charging base and remain upright. The battery indicator lights will flash when the battery is charging.
3. Charging is complete when the battery indicator lights shine steadily. Charging time may take 4–5 hours.



# HOW TO OPERATE


## USING THE VACUUM CLEANER

1. Remove the charged vacuum cleaner from the charging base.
2. Hold the handle in one hand and tap the brush head with 1 foot to release it parallel to the floor.
3. Keeping loose items and feet clear of the brush head, press the power button to turn on the vacuum cleaner.
4. Press the “+” button to increase suction and the “-” button to decrease suction.
5. Press the roller/lights button to start or stop the roller brush from turning.
6. Press the elbow release button on the back of the handle, as shown in figure D, to bend the handle forward for easy cleaning under furniture. This button is also used to collapse the handle back and down for compact storage.
7. When finished cleaning, return the vacuum cleaner to the charging base so it can recharge for next time.

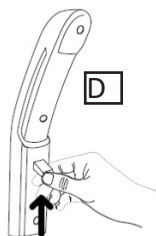

## USING THE HAND VACUUM CLEANER

1. Separate the hand vacuum cleaner from the main body by pressing the hand vacuum release.
2. If desired, attach the crevice tool or brush tool by inserting into the open end of the dust bin.
3. Press the hand vacuum power button to operate the hand vacuum.
4. To replace the hand vacuum, remove any attached tool and insert the end of the dust bin down into the opening in the main body.
5. Press with your thumbs in the areas indicated in figure E to snap the hand vacuum cleaner securely to the main body.

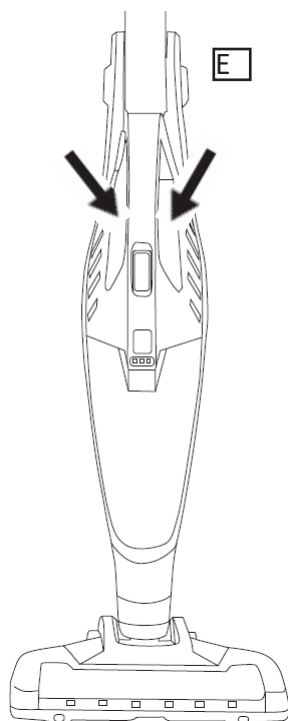

# CLEANING & CARE

## **EMPTYING THE DUST BIN**


1. Empty the dust bin after every use.
2. Allow the vacuum cleaner to cool, then separate the hand vacuum from the main body by pressing the hand vacuum release.
3. Press the dust bin release and separate the dust bin from the hand vacuum cleaner.
4. Use an index finger to pull out the filter and filter cover.
5. Shake the contents of the dust bin into a trash receptacle.
6. Remove the filter cover by turning it counterclockwise.
7. Remove dust and debris from the filter with a soft brush (not included).
8. Replace the filter as needed.

## **CLEANING THE ROLLER BRUSH**

1. Remove the roller brush (see assembly instructions on page 6) to dislodge hair and debris, as needed.
2. Make sure the roller brush is securely back in place before using the vacuum cleaner again.

## **STORAGE**

1. Store the vacuum in a cool, dry area.
2. The crevice and brush tools can be stored on the back of the charging base (see figure F).
3. For compact storage, the handle of the vacuum cleaner can be folded down at the elbow.

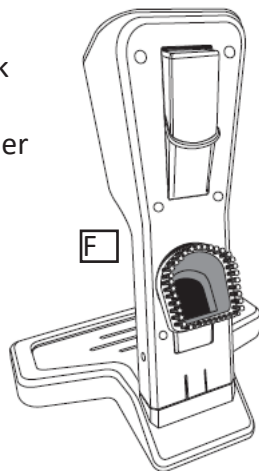

**WARNING: DO NOT immerse any battery, cord, plug or electrical appliance into water.**









# WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge provided the product is returned freight prepaid with proof of purchase to Ginny's.

Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



**Intertek**

Ginny's, Inc.  
1112 7th Avenue  
Monroe, WI 53566

Customer Service: 800-544-1590  
8:00 a.m. to Midnight CST, Monday through Friday